



## User's Guide

Thank you for purchasing **Sunrise Creator™** Dawn Simulator!

**Sunrise Creator turns virtually any bedroom lamp into a pleasurable sunrise by gradually increasing the light level from dark to full-light over 30 minutes. Instead of being startled from a deep sleep by your alarm clock, your body is encouraged to wake up slowly, gently and naturally—you'll feel happier and more refreshed.**

## Features




## Before You Begin

Please remove the protective decal covering the Sunrise Creator's display. If a red tab is evident on the right side between the two halves of the product, it must be removed to activate the back-up batteries. The batteries do not affect the operation of your sunrise cycles, their function is only to retain programming during power outages. **NOTE: On some products this tab is removed by the factory before shipping. If so, please disregard this step.** You can easily access the tab by gently pulling the top and bottom of the unit apart. (They are held together by three strips of Velcro.®) After pulling the tab, press the two halves of the product firmly back together.

## Program Your Sunrise Creator

**STEP 1: Set the clock for the correct time of day.**

- Press the SET button once. The display will advance to the TIME mode and the time display will be flashing.
- Press the + or - button until the correct time of day is displayed. Holding either button down will increase the speed of the setting.

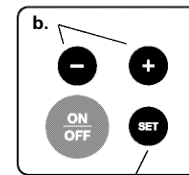

**STEP 2: Set the time you want the sunrise cycle to begin.**

- After the correct time displays, press the SET button once. The display will read EVENT 1 ON. This will be flashing with a blank time display.
- Press + or - until the desired start time is displayed. **NOTE: We suggest you set this time to be 15-30 minutes BEFORE your alarm clock is scheduled to come on.**



**STEP 3: Set the time you want your lamp to turn off.**


- After the desired ON time setting is determined, press the SET button once. The display will read EVENT 1 OFF.
- Press + or - until the desired OFF time is displayed. Program Sunrise Creator to turn your lamp off any time following completion of the sunrise cycle.



**STEP 4 (optional): Repeat Steps 2 and 3 if a second ON/OFF cycle is desired during the same day.**

**STEP 5: Finalize the programming.**

- Press the SET button once after the sunrise Start/Stop time cycles are established. This will put Sunrise Creator into AUTO SUNRISE mode. The display will only be showing the time of day with the colon flashing.

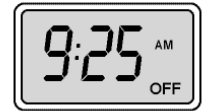


**NOTE: To clear an event time, push the + and - buttons at the same time while in the ON or OFF setting you want to clear.**

## Connect Your Lamp to Sunrise Creator

**STEP 1:** Confirm the lamp is using an incandescent lightbulb. **Sunrise Creator is NOT compatible with compact fluorescent bulbs. (Please read Important Information box below.)**

**STEP 2:** Applying firm pressure, plug your lamp into the slots on the back of the Sunrise Creator unit. Make sure your lamp's switch is in the "on" position and stays in the "on" position at all times. A lightbulb between 60 and 100 watts (maximum) is recommended for the best sunrise experience.

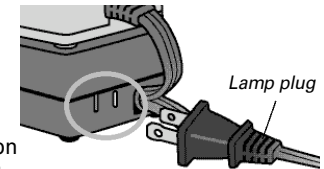

**STEP 3:** Plug Sunrise Creator into an electrical outlet that has continuous power to it (not controlled by an on/off wall switch).

## Activate Automatic Sunrise Cycle

Set the switch on the left side of the product to the AUTO SUNRISE position to activate the program. *That's it!*



**REMEMBER:** Always use the AUTO SUNRISE switch to activate the sunrise. Do NOT press the Override ON/OFF button at the top of the unit for this function.

**You're now ready to enjoy the benefits of Sunrise Creator!**

## IMPORTANT INFORMATION Please read prior to use.

- Use **ONLY ONE INCANDESCENT** light bulb with a maximum rating of 100 watts. **EXCEEDING 100 WATTS WILL PERMANENTLY DISABLE SUNRISE CREATOR AND VOID THE WARRANTY.**
- DO NOT USE COMPACT FLUORESCENT, FLUORESCENT, 3-WAY OR ENERGY EFFICIENT-TYPE LIGHT BULBS, OR TOUCH-TYPE LAMPS.



- Your experience may be enhanced by using incandescent light bulbs with a natural light color balance. These are available at most home improvement and hardware stores.
- A back-up alarm clock may still be desired.

## To Turn Your Lamp On and Off During the Day

The instant full-ON and OFF operations of your lamp will be controlled by Sunrise Creator at



all times. (Your lamp switch must always remain in its "on" position for proper operation.) To manually turn your lamp on and off instantly, use the AUTO SUNRISE / LAMP OFF / LAMP ON switch located on the left side of the Sunrise Creator. (**IMPORTANT: This switch must be placed in the AUTO SUNRISE position for the sunrise cycle to be activated.**)

## To Override a Sunrise Cycle

If a scheduled sunrise cycle has begun and you would like to turn it off, press the ON/OFF button on the top of the unit once. The sunrise cycle will automatically start again at the next programmed sunrise time.

If you would like to begin a sunrise cycle during a non-programmed time, press the ON/OFF button on the top of the unit once. (Side switch must be in AUTO SUNRISE mode.) To turn the sunrise off, press the ON/OFF button once more. The sunrise cycle will operate automatically again at the next programmed sunrise time.

## Troubleshooting Guide

### If Sunrise Creator Does Not Function

- **Does the electrical outlet have power coming to it?** The outlet cannot be controlled by a wall switch that is placed in the "off" position. Make sure Sunrise Creator is plugged into a live outlet which is continually on.
- **Check the light bulb.** The bulb may be burned out. Try using a fresh bulb.
- **Are you certain your lamp's switch is in the "on" position?**
- **Did you carefully follow all of the steps under Program Your Sunrise Creator?** Retrace your steps to make sure you've done everything correctly.
- **Are you certain the unit is in AUTO SUNRISE mode?** If the words TIME, EVENT 1, or EVENT 2 appear at the bottom of the LCD display, press the SET button at the top of the unit until they all disappear.

- **Is the switch on the left side of the unit in the AUTO SUNRISE position?** The AUTO SUNRISE / LAMP OFF / LAMP ON switch must be in the AUTO SUNRISE position for the next scheduled sunrise to occur.
- **Is the light bulb you're using over 100 Watts?** As stated in the *Important Information* box, exceeding 100 Watts will permanently disable Sunrise Creator and void the warranty.

## LCD Display Reads "LO."

- The backup batteries may be weak and may need to be replaced. See the *To Replace the Backup Batteries* section. **NOTE: Low batteries will NOT affect the operation of your sunrise cycles. The batteries only retain programming during power outages.**

## To Replace the Backup Batteries

Sunrise Creator has backup batteries (already installed) to retain programming during power outages. **When the batteries are running low, the word LO will be displayed.** Follow these steps when this occurs.

**STEP 1:** Unplug Sunrise Creator from the electrical outlet.

**STEP 2:** Gently pull the top and bottom halves of the product apart. They are held together by three strips of Velcro®.



**STEP 3:** Use a small flat screwdriver to pry the battery compartment open. The compartment is located on the bottom of the upper section.

**STEP 4:** The unit uses two Model L1154, SR44 or LR44 batteries. Replacement batteries may be found at most retailers where traditional alkaline batteries are sold. Remove the old batteries (you have one minute to replace the batteries once the old batteries are removed before losing the existing programming) and replace the new batteries with the positive terminals facing as shown in the adjacent illustration.

**STEP 5:** When the batteries are in place, press the battery holder back into its original position.


**STEP 6:** Align the upper and lower sections of the product and press them firmly together.

**STEP 7:** Plug Sunrise Creator back into the electrical outlet.

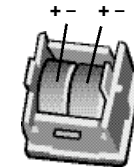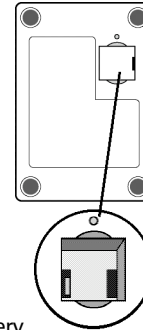

## To Delete All Programmed Settings

To quickly delete all time and event settings at one time, use the point of a pencil and press the RESET button found above the battery holder located on the bottom of the top section. Follow STEPS 2 and 6 in the *Replacing the Backup Batteries* section above to detach and reattach the two sections.

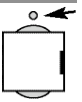

## Need Help?

For assistance regarding the setup or operation of Sunrise Creator, please e-mail us at [support@sunrisecreator.com](mailto:support@sunrisecreator.com) Sunrise Creator is manufactured by: i360, 1201 East Fayette Street, Suite 14, Syracuse, NY 13210.

**Please recommend Sunrise Creator to your family and friends!**

Velcro® is a registered trademark of Velcro Industries B.V.

## Limited One-Year Warranty

If within one (1) year from the date of purchase, this product fails due to a defect in material or workmanship, i360 will repair or replace it, at its sole option, free of charge. This warranty is extended to the original household purchaser only and is not transferable. The warranty does not apply to: (a) damage to units caused by accident, dropping or abuse in handling, acts of God or any negligent use; (b) units which have been subject to unauthorized repair, opened, taken apart or otherwise modified; (c) units not used in accordance with instructions; (d) damages exceeding the cost of the product; (e) sealed lamps and/or lamp bulbs, LCD's or batteries; (f) the finish of any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear; (g) transit damage.

The supplier and its principals assume no responsibility for loss or damages resulting from the use of any information, product, or process related to the Sunrise Creator product.

i360 will not be liable for incidental or consequential damages. Some states do not allow the exclusion of limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty is in lieu of all other express or implied warranties. All implied warranties, including the warranty of merchantability and the warranty of fitness for a particular purpose, are hereby modified to exist only as contained in this limited warranty, and shall be of the same duration as the warranty period stated above. Some states do not allow limitations on the duration of an implied warranty, so the above limitation may not apply to you.

## Return and Repair Policy

**In-Warranty Repairs.** In-warranty units will be repaired or replaced free of charge and shipped to the customer at i360's expense. The repair does not extend the warranty beyond the original warranty period.

**Expired Warranty or Voided Warranty Repairs.** A unit that is out-of-warranty will be repaired at a cost of \$25.00 including parts and labor. This applies only to those units that can be repaired. The repaired part will be given a 30-day repair warranty. The repair warranty period for out-of-warranty repairs of obsolete products will be 30 days or until repair parts are no longer available, whichever comes first.

**Warranty and/or Repair Returns.** Prior to returning any product for repair, please e-mail: [support@sunrisecreator.com](mailto:support@sunrisecreator.com) to request an RMA number. In order to be processed properly, the RMA number must be on the shipping label when the package is received by i360. Carefully pack and send prepaid, preferably in the original box. Include proof of date of purchase. Please be sure to wrap the product securely to avoid shipping damage. If product is determined to be under warranty, shipping costs will be refunded to purchaser provided the item is mailed within the US via United States Postal Service and arrives in good condition. i360 will reimburse the customer by check for mailing costs not to exceed \$4.60. Please contact [support@sunrisecreator.com](mailto:support@sunrisecreator.com) for Canadian reimbursement amount.

This warranty service is made by: i360, and is available by returning the product along with proof of purchase to i360: 1201 East Fayette Street, Suite 14, Syracuse, NY 13210.

